

# ACS R/RP

Bennett EIC 5000 connection

## Connecting the ACS R/RP to a Bennett EIC 5000 trim system

The terminals 3,4,5,6 are connected directly to the pump. The original control panel and control unit have to be removed. The supply to the old control unit ( Orange/red +, black - ) maybe be used for the ACS. Make sure the black wire from the pump is grounded.

After installation, please verify the control direction according to instructions in the user's manual.

