

# ACS R/RP

Lenco LED indicator and standard switch connection

## Connecting the ACS R/RP to a Lenco LED indicator / Standard switch system

The terminals 3,4,5,6 are connected directly to the actuators. The original control panel and “black box” have to be removed. After installation, please verify the control direction according to instructions in the user’s manual.

