



INSTALLATION AND OPERATION MANUAL

Whale® 12 V Water Heater



Model Number	Description
S360EW	12 V Electric Water Heater

SYSTEM REQUIREMENTS:

Minimum of a 100HP engine with at least a 30A residual current at cruising speed within a dual battery system

or

A dedicated 12 V battery source with 30A available

PLEASE NOTE: When connected to your boat 12 V system, care must be taken to ensure the heater is only operational at cruising speed. The heater must be switched off when the vessel is idling, this will prevent battery power drainage.

INSTALLATION AND OPERATION MANUAL

Whale® 12 V Water Heater

ENG

INSTALLATION AND USER INSTRUCTIONS

Thank you for purchasing this Whale® product. For over 30 years, Seaward Products has manufactured high quality water heating, cooking and gas supply products. The company has now been taken over by Whale®, who has led the way in the design and manufacture of water systems including freshwater, bilge, gray and black waste management, faucets, showers, plumbing and accessories in the marine and RV industries for the past 60 years. Whale® products are built on a reputation for quality, reliability and innovation backed up by excellent customer service. For more information please visit www.whalepumps.com

1. SPECIFICATION

Product Code	S360EW
Description	12 V Electric Water Heater
Capacity	3 US Gals (12 ltrs)
Electrical Supply	12 V d.c. , 300W
Recommended Fuse Size	35 Amps
Current Draw	30 Amps
Maximum Water Temperature	140 °F (60 °C)
Temperature and Pressure Valve Specification	210°F (99°C), 75 psi (5.2 bar)
Maximum Tested Pressure	300psi (20.7 bar)*
Dimensions (wxdxh)	13 ½ " x 14 ½ " x 13 ¼ " (343mm x 369mm x 337mm)
Materials	Tank - ALCLAD Casing - White Powder Coated Aluminium
Connections	½" NPT Female For connection to 15mm Quick Connect use WX1514
Weight	11lbs (5kg)

*Note, ABYC Test requirements 125 psi, H-23

2. LIST OF CONTENTS AND LIST OF DIAGRAMS

- | | | |
|----------------------------|-------------------------|----------------------------------|
| 1. SPECIFICATION | 7. WARNINGS | 13. SERVICE SUPPORT DETAILS |
| 2. CONTENTS AND DIAGRAMS | 8. INSTALLATION | 14. PATENTS/ TRADEMARKS |
| 3. PRINCIPLES OF OPERATION | 9. INSTRUCTIONS FOR USE | 15. WARRANTY STATEMENT |
| 4. TO THE USER | 10. MAINTENANCE | 16. EU DECLARATION OF CONFORMITY |
| 5. TO THE FITTER | 11. WINTERIZING | |
| 6. APPLICATION | 12. TROUBLE SHOOTING | |

LIST OF DIAGRAMS:

- | | | | |
|------------------------------|---------------------------|-------------------------|--------------------|
| 1. Mounting the Water Heater | 3. Grounding Instructions | 5. Typical Installation | 7. Internal Wiring |
| 2. Inlet and Outlet Ports | 4. Wiring Diagram | 6. Replacing the Anode | |

3. PRINCIPLES OF OPERATION

The Whale® 12 V Water Heater is designed for use on outboard boats to provide hot water on the go. It requires a 12 V d.c. power supply to heat water to 140°F in less than 80 minutes and has integrated safety features including temperature and pressure valves, thermal cut-out and heating indication output.

4. TO THE USER

Read the following carefully before installation and use.

5. TO THE FITTER

WARNING: Please note that incorrect installation may invalidate the warranty. Check that the product is suitable for the intended application, follow these installation instructions and ensure all relevant personnel read the points listed below. Also ensure that these operating instructions are passed on to the end user.

6. APPLICATION

This Whale® 12 V Water Heater is designed for use in recreational marine vessels with a suitable power output operating on 12 V d.c. electrical supply only. If it is intended for any other purpose, it is the user's responsibility to ensure that the heater is suitable for the intended use. Whale® heaters are not suitable for domestic applications.

7. WARNINGS



Please note: When using electrical appliances, basic safety precautions must be followed to reduce the risk of fire, electrical shock, or injury.

This Whale® Heater must be installed by a qualified marine electrician.

CAUTION

Hydrogen Gas

- Hydrogen Gas can be produced in a hot water system that has not been used for a long period of time (generally 2 weeks or more). Hydrogen gas is extremely flammable.
- •To reduce the risk of injury under these conditions, prior to using electrical appliances, the user must ensure that the hot water faucets in the galley are opened for several minutes until there is a smooth water flow. If hydrogen is present, there will be an unusual sound similar to air escaping through the pipe as the water begins to flow.
- •Run the faucet for several minutes until there is a smooth water flow to release all the gas.
- **WARNING** - Do not smoke or have any open flame near the faucet when checking for hydrogen.

Galvanic Corrosion

- To help prevent possible damage due to electrolysis, installing a galvanic isolator is recommended.
- Galvanic corrosion **is not** covered under warranty.

Corrosion

- Corrosion may occur in your Water Heater due to high current or in areas of hard water with a higher concentration of dissolved salts.
- This Water Heater is therefore supplied with a sacrificial anode to prevent rapid corrosion.
- Anode rods preserve the life of a Water Heater by corroding themselves instead of the heater.
- These anode rods are easy to replace and **must be** checked for corrosion every 6 months. Please see Maintenance (Section 10) for more information.
- **Please note** - Zinc anodes do not prevent corrosion, magnesium anodes are recommended.
-

Warnings - Please read prior to installation

1. Read all instructions prior to installation and use.
2. This Water Heater must be connected to a properly grounded source for aluminium boats (see Section 8 iv).
3. **WARNING** This Water Heater is powered by 12 V d.c. and can draw up to 30 amps. Turn off power prior to installation or maintenance to prevent injury or death.
4. Install and locate this Water Heater **only** in accordance with the provided installation instructions.
5. This Whale® Water Heater is designed for use in a marine vessel only to provide hot water. If it is intended for any other purpose, it is the user's responsibility to ensure that the heater is suitable for the intended use.
6. The water temperature cannot be adjusted. It is automatically set to approximately 1400 F / 600 C to prevent bacteria growth.
7. To avoid scalding, the temperature of the hot water supplied to faucets and showers must be controlled via a thermostatic mixer valve or similar as per ABYC H-23 standards (see section 8 vii.).
8. **Do not** use water from the Water Heater as drinking water.
9. Close adult supervision is necessary when this heater is being used by children or vulnerable adults.
10. **Do not** operate this Water Heater if the power supply line is damaged, if the heater is not working properly, or if it has been damaged or dropped.
11. Do not flush caustic chemicals through your system as this will cause damage to your heater. Damage that occurs to the heater due to caustic chemicals is **not** covered under warranty.
12. **WARNING:** Fire hazard. Wiring **must** comply with applicable electrical standards and include a properly sized fuse or circuit breaker. Improper wiring can cause a fire resulting in injury or death. Switch off the power while making connections. Suggested wiring information is given as guidance only. For full information, refer to the USCG, ABYC and ISO regulations for marine applications and wiring gauges, connectors and fuse protection.

Contact Whale® Support team for further technical advice
USA: +1 802 367 1091 or email: usasales@whalepumps.com
ROW: +44 (0)28 9127 0531 or email info@whalepumps.com

8. INSTALLATION

NOTE: Incorrect installation will invalidate warranty and could make the Water Heater unsafe for use. Ensure your heater is properly installed and grounded by a qualified marine electrician.

8.i Preparation

- Always disconnect power sources before installing.

8.ii Location

- Locate the Water Heater as close to the power supply as possible.
- Locate the heater in a dry location away from the bilge area and standing water.
- **Do not** install the Water Heater on its side or upside down.

8.iii Mounting Instructions

- Mount this product on a flat, horizontal surface only.

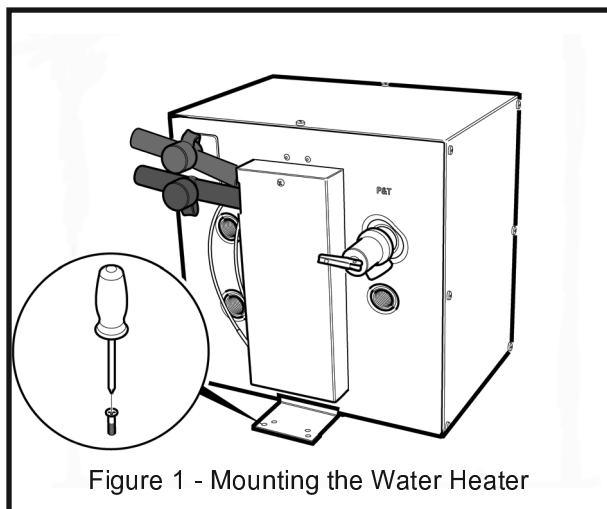


Figure 1 - Mounting the Water Heater

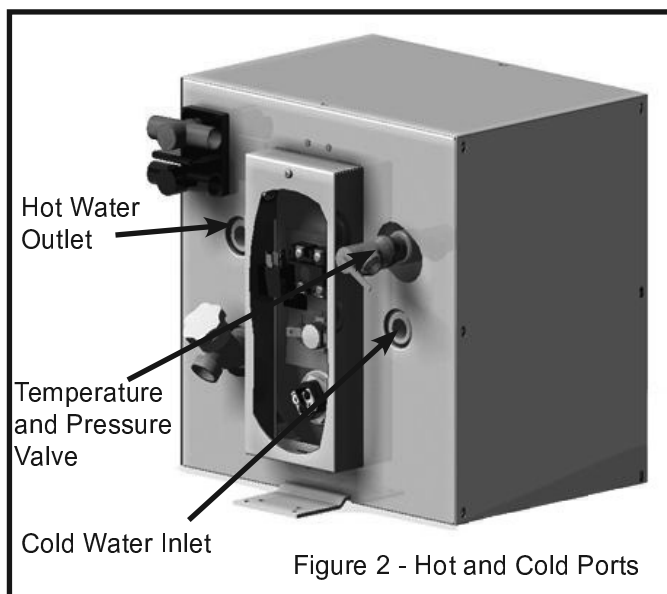


Figure 2 - Hot and Cold Ports

Step 1 Secure mounting brackets to structure with eight #12 minimum screws or ¼" (6.3mm) screws and nuts (See figure 1.). The minimum mounting surface depth is ½" (12.5mm).

Step 2 Connect the cold water supply and hot water outlet to heater (see figure 2) using ½" N.P.T. fittings or WX1514 / WX1524B for a Whale® Quick Connect system.

NOTE: Whale® recommends the use of a metal Braided Hose Connector on the hot outlet for connection to standard flexible pipework.

Step 3 The Temperature and Pressure Relief Valve (provided with tubing) must be oriented so that discharge can exit no more than 6" (152.3mm) above, or at any distance below the structural floor. **This must not be in contact with any live electrical part.**

The Temperature and Pressure Relief Valve is factory installed. The pressure relief limits the pressure to 75 psi (5 bar) +/- 10% and the temperature to 210°F / 99°C +/- 10%. For replacement parts see Maintenance (Section 10) or contact Whale® Support.

8.iv Grounding Instructions - Aluminium Boats

NOTE For aluminium boats the earth of the water heater must be connected to a separate sacrificial anode or galvanic isolator.

NOTE Do not connect the earth wire to the negative of the 12 V circuit.

Step 1 Remove the electrical access panel to gain access to the earth tab. This is located at the top of the internal panel and labelled with the earth symbol (see figure 3).

EARTH SYMBOL



Step 2 The separate ground / bonding strip must be connected to the water heater using the supplied green and yellow wire. The connection is made to the internal earth tab using the bolt and nut supplied.

NOTE: Do not place a switch in the grounding circuit.

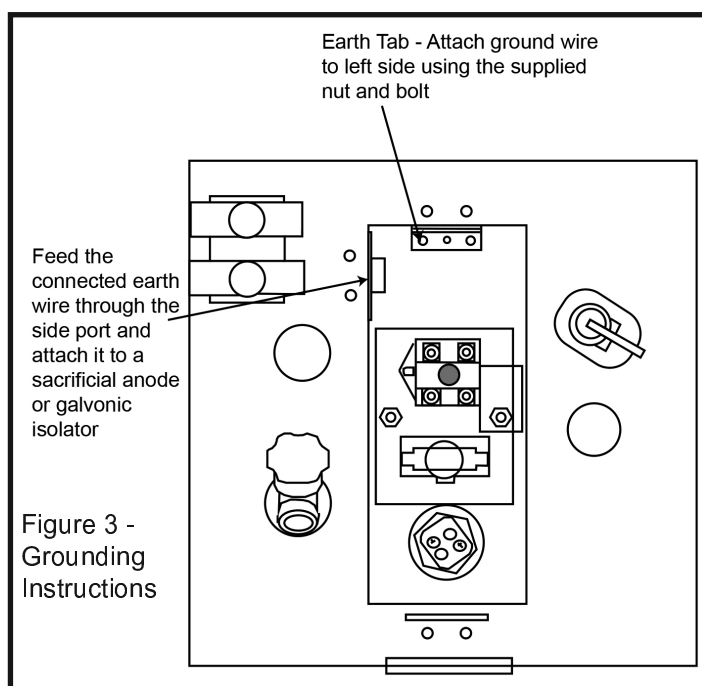


Figure 3 - Grounding Instructions

- **WARNING:** Fire hazard. Wiring must comply with applicable electrical standards and include a properly sized circuit breaker. Improper wiring can cause a fire resulting in injury or death.
- Switch off the power prior to making connections.
- Suggested wiring information is given as a guide only. For full information, refer to USCG, ABYC and ISO regulations for marine applications and wiring gauges, connectors and circuit protection.

Care must be taken to ensure the heater is only operational at cruising speed. The heater must be switched off when the vessel is idling, this will prevent battery power drainage.

[illegible]

The diagram illustrates a hot water system for a boat, showing the layout of pipes, valves, and components. The system is divided into three main sections: the upper deck area, the lower deck area, and the hull area.

- Upper Deck Area:**
 - Twist Deck Shower:** Located on the left side of the upper deck.
 - Elite Faucet:** Located in the center of the upper deck.
 - Swan Neck Galley Faucet:** Located in the center of the upper deck.
 - Elegance Combo Mixer:** Located on the right side of the upper deck.
- Lower Deck Area:**
 - Quick Connect Elbow:** Located on the left side of the lower deck.
 - Quick Connect Equal Tee:** Located in the center of the lower deck.
 - Stem Shut off Valve:** Located on the right side of the lower deck.
 - Expansion Vessel:** Located on the right side of the lower deck.
 - Thermostatic Mixer:** Located on the right side of the lower deck.
 - Water Heater:** Located on the right side of the lower deck.
 - Non-return Valve:** Located on the right side of the lower deck.
- Hull Area:**
 - Water Tank:** Located on the left side of the hull.
 - Accumulator Tank (optional):** Located in the center of the hull.

The diagram shows the flow of water from the water tank through the pipes and valves to the various fixtures and the water heater. The system is designed to provide hot water to the upper deck fixtures and the lower deck fixtures, as well as to the water heater.

9. INSTRUCTIONS FOR USE

Before using this Water Heater please read the instructions for use:

- Do not operate heater unless it is completely full of water. If heater has been operated without water and fails to work, follow the switch reset instructions in Section 9.ii.
- The 12 V d.c. Water Heater can only be operated when the engine(s) are running at cruising speed to ensure batteries remain fully charged. Alternatively the Water Heater can be connected to a dedicated 12 V battery.
- If the boat is connected to the dockside water system, ensure that the system is turned off at the dock when not attended. Also ensure that a pressure regulator is fitted to the vessel.
- Heat up times are dependant on your installation and other variable factors including initial temperature of the water, power available and ambient temperatures.
- The water temperature **cannot** be adjusted. It is automatically set to approximately 140°F / 60°C to prevent bacteria growth.
- To avoid scalding, the temperature of hot water supplied to faucets and showers **must be** controlled via a thermostatic mixer valve as per ABYC H-23 standards (See section 8.vii).
- **Do not** use water from the Water Heater as drinking water.

9.i Instructions for Use

1. Fill the water system and completely fill the Water Heater tank according to boat or pump manufacturer's instruction, purging all pipes and outlets. **NOTE** - Depending on the boat system size, it may take time to fill and deliver a smooth flow of water from hot and cold outlets.

NOTE This water heater is not designed to run dry. Running the heater dry will result in damage to the system.

2. Locate and switch 'ON' the remote electrical switch for your water heater, if a running light is installed this will illuminate.

3. Typical heat up times for this Water Heater are as follows:

Heat Up Time	
140°F / 60°C	80 minutes
104°F / 40°C	41 minutes

4. The running light will remain lit until the water has reached 140°F / 60°C, then cycle on and off as the temperature is maintained. Once switched off, the Water Heater will retain usable hot water for up to 10 hours.

NOTE If the running light cuts out within the first 30 minutes of operation, turn off the Water Heater and refer to Reset Instructions (Section 9.ii).

5. Switch the remote electrical switch 'OFF' prior to turning off engines and ensure it remains off when you restart the engine.
6. The Temperature and Pressure Valve may weep during initial operation - this is normal and the valve will seal itself with use.

9.ii Reset Instructions

If the Water Heater has accidentally been operated without water and fails to work, the Water Heater is equipped with a high limit switch which can be manually reset. If the limit switch activates, proceed as follows:

- Turn power off at main power panel and remote switch.
- Ensure that the Water Heater is filled with water by filling the fresh water tank and running a hot tap until a smooth flow is achieved.
- Remove wiring access cover and fibrous dielectric paper.
- Depress red button on high temperature limit switch.
- Replace cover and turn power on.
- If temperature limit switch re-activates, contact Whale® Support (section 13).

10. MAINTENANCE

This Whale® Water Heater is designed to only require minimal maintenance.

WARNING: Before servicing, turn off all power and drain the system.

NOTE: **Do not** repair or replace any part of the Water Heater unless specifically recommended in the installation manual. For technical support contact Whale® Support (section 13).

Annual Checks

- Whale® advise an annual boat electrical system check that must be completed by an marine electrician.

Optimal Performance

- Ensure this product is regularly cleaned to ensure consistent performance.
- To clean and sterilise the inside of the Water Heater, use diluted sterilising fluid and fully rinse through with clean fresh water afterwards.
- The outside of the appliance should not require cleaning. If it does, turn off all electrical supply at breaker and wipe down with a damp cloth only. Allow the Heater to fully dry prior to reconnecting the electrical supply.

NOTE **Do not** use abrasive cleaners on any Whale® Water Heater

- If de-scaling is required, this can be done using a de-scaling solution. Fully flush out the Water Heater after de-scaling.

Replacing the Anode

The Whale® replacement anode is Part # 75873.

- Drain tank fully and turn off power.
- To replace the anode, remove the drain valve and the pre-installed sacrificial anode (figure 6) and screw the new anode and drain valve back in its place.
- Whale® recommends checking the anode regularly for signs of corrosion. If you have any concerns about rapid corrosion, please contact Whale® Support (Section 13).

The following service items are available for this Water Heater from Whale® (Figure 7).

Heating Element #75876
High Heat Limit Switch #74607
Magnesium Anode #75873

Relay #75878
Temperature and Pressure Valve #74659
Thermostat #73129

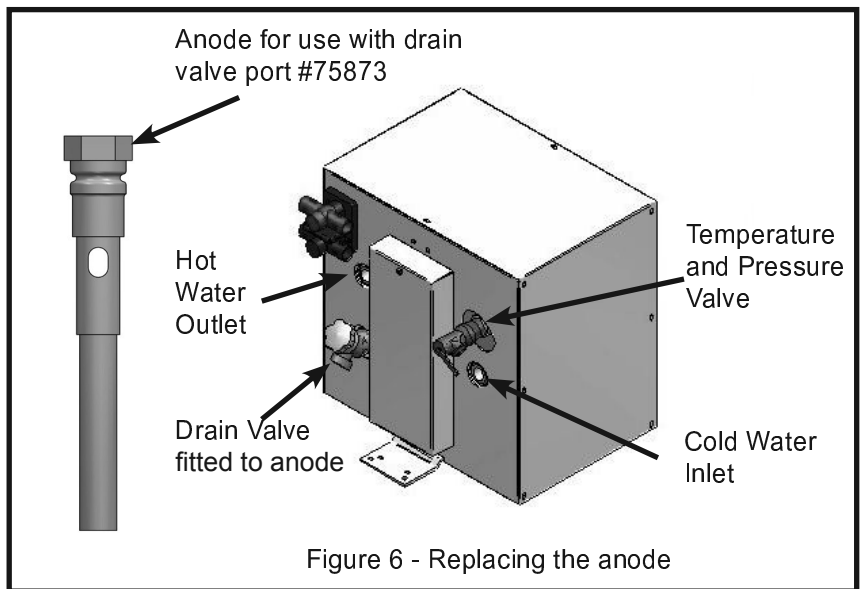


Figure 6 - Replacing the anode

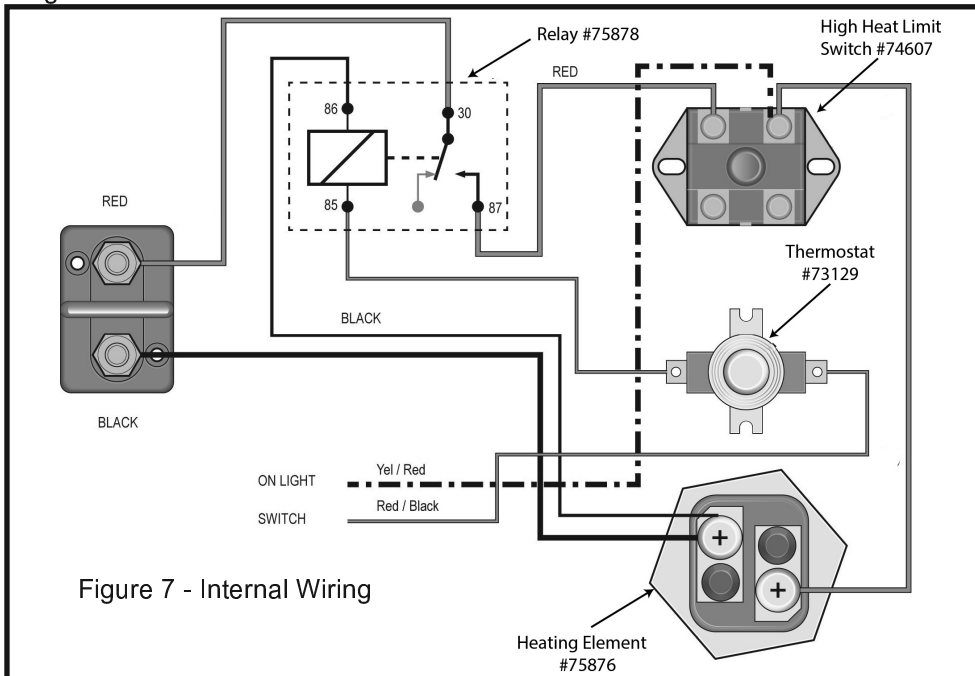


Figure 7 - Internal Wiring

NOTE: Figure 7 depicts the internal wiring of this Water Heater. For advice on servicing any of the highlighted components please contact Whale® Support (Section 13) or a marine electrician.

11. WINTERIZING

Note - If water is allowed to freeze in the system, serious damage to the pipe work and pump may occur. Failures of this type will invalidate warranty. To best avoid this damage, completely drain the water system.

WARNING - The power source must be turned off before draining and refilling this Water Heater.

1. Drain the complete freshwater system either using the pump or a drain valve.
2. Open all the faucets (including the Water Heater drain valve) and allow pump to purge the water from the system, and then turn the pump off.
3. Disconnect the pump and turn on to purge into an adequate basin. Only reconnect the pump when water system is to be used.
4. Remember to leave all faucets including the Water Heater drain valve open to avoid any damage (except for Whale Twist™ Deck Shower if installed).

12. TROUBLESHOOTING

PROBLEM	POSSIBLE CAUSES	POTENTIAL SOLUTION
No hot water	Cold water inlet valve is incorrectly orientated (if present)	Ensure check valve is the correct orientation (if present).
	No water in the tank	Fill the tank with water.
	High Limit Switch activated	Press reset and try again. If this has no effect, contact a local electrician to replace the switch or element.
	Faulty element	Replace element.
	Incorrect wiring	Check wiring and contact a marine electrician.
	No / insufficient electricity supply	Contact a marine electrician to check the electrical supply.
	Faulty thermostat	Replace the thermostat (Section 13).
	Heavy calcification	Flush your hot water heater. If this has no affect, replace the heating element (section 10).
	Blocked ports or non return valve	Clear the blockage.
	Thermomixer valve set too cold	Adjust to between 40°C (104°F) and 55°C (131°F).
	Circuit breaker has blown	Check and replace if necessary.
	No power as water heater is activated while engine is not running	Recharge batteries and only use the water heater while the engine is activated.
	Circuit breaker tripped due to low power or insufficient water supply	Fill the water tank fully and only use while engine is running.
No output from tank	Air lock	Bleed the system.
High limit Switch continually trips	Insufficient water in the tank	Check non-return valve is not blocked and fill tank to capacity.
	Wrong breaker amperage	Check fuse rating to ensure correct amperage and replace if necessary.
	Faulty element	Replace element.
	Heavy calcification in water tank	Flush and clean regularly.
	Faulty wiring	Have a marine electrician check the electric circuit.
Pressure relief Valve (TMP/TMV) Leaking	Initial use	The T&P valve may leak on initial use until it seals itself. Open the valve and re-run the system.
	Faulty / old valve	Replace the valve.
	Water Heater left constantly on	Replace valve (due to deposit build-up on valve seat) and do not leave Water Heater constantly 'on'.
	Tank not winterized	Replace valve and winterize tank in future.
	Electric thermostatic controls faulty	Have a marine electrician check the system.
Leaking tank	Damage to tank due to improper service	Replace Water Heater.
	Electrolysis due to absent or faulty galvanic isolator	Replace Water Heater and install galvanic isolator.
	No anode fitted to tank	Replace Water Heater and fit anode in drain valve fitting
	Corrosion or damage due to tank not winterized properly	Replace Water Heater and ensure it is winterized in future.
	Fittings not correctly attached	Check all connections are water-tight.

13. SERVICE SUPPORT DETAILS

For installation or service advice please contact Whale® Customer Support:

UK Tel: +44 (0)28 9127 0531

USA Tel: 1 802 367 1091

UK Fax: +44 (0)28 9146 6421

USA Fax: 1 802 367 1095

UK Email: info@whalepumps.com

Email USA: usasales@whalepumps.com

14. PATENTS AND TRADEMARKS

Whale® is a registered trademark of Munster Simms Engineering limited (also trading as Whale® and Whale Seaward Inc).

15. WARRANTY STATEMENT

This Whale® product is covered by 2 years warranty. For further details please see the enclosed Statement of Limited Warranty. This product is manufactured by Whale Seaward Inc in the USA.

©Copyright Whale® 2015- All rights reserved.

WHALE®, is a registered trademark of Munster Simms Engineering Limited, Bangor Northern Ireland trading as Whale Seaward Inc. Whale's policy is one of continuous improvement and we reserve the right to change specifications without prior notice. Illustrations are for guidance purposes only.

16. EU DECLARATION OF CONFORMITY, STANDARDS AND APPROVALS

We hereby declare, under our sole responsibility, that the enclosed equipment is in conformity with the following relevant EU legislation:

General Product Safety Directive 2001/95/EC
RoHS 2011/65/EU

Basis on which conformity is declared

The above equipment complies with the protection requirements of the stated directive.

Standards applied

ABYC E-11 AC and DC Electrical Systems on Boats (2003)
ABYC H-23 Installations of Potable Water Systems

Signature:



Name: Richard Bovill
Function: Engineering Director
Location: 2 Enterprise Road, Bangor, Northern Ireland, BT19 7TA
Date of Issue: 23rd October 2014